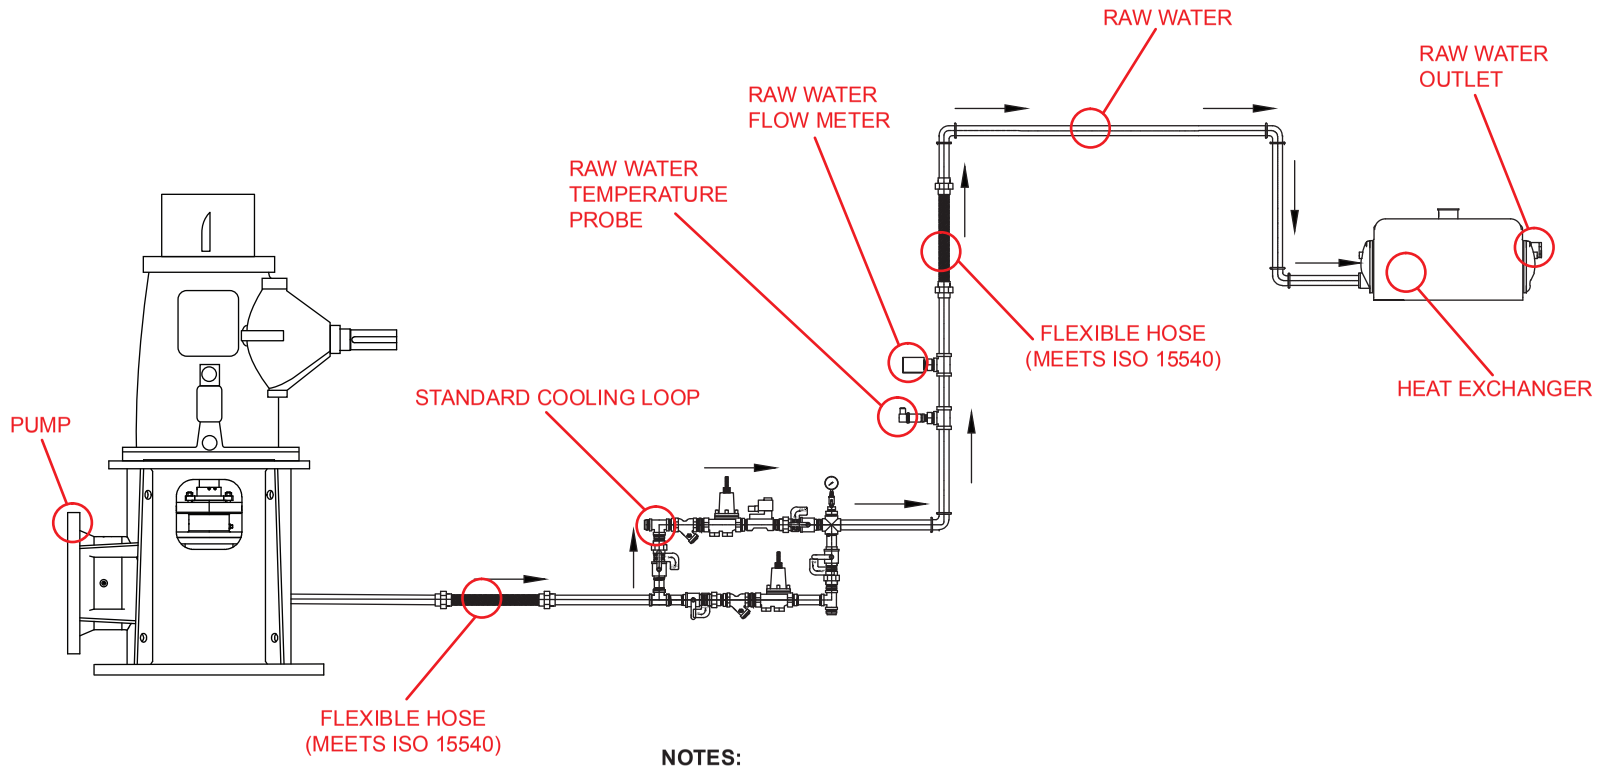

NOTES:

1. WHEN THE RAW WATER FLOW IS LESS THAN 80% OF RATED FLOW OR RAW WATER PRESSURE IS LESS THAN 80% OF RATED PRESSURE (NORMALLY 12 PSI [0.8 BAR] THE PRESSURE SWITCH WILL SEND AN ALARM SIGNAL TO THE INSTRUMENT PANEL.
2. WHEN THE RAW WATER TEMPERATURE IS HIGHER THAN 104°F [40°C] THE TEMPERATURE SENSOR WILL SEND AN ALARM SIGNAL TO THE INSTRUMENT PANEL. THE ALARM WILL STOP WHEN THE RAW WATER TEMPERATURE DROPS BELOW 86°F [30°C].

REV	DESCRIPTION	DWN	APVD	DATE
A	CREATION	MJF		09/01/2020

AMERIFLO

DRW BY: MJF	DATE: 09/01/2020	NAME: COOLING SYSTEM FLOW SCHEMATIC (EXTERNAL RAW WATER)	PROJECTION:
CHK BY:	DATE:	PART NO.: CSFSE-00	PROJECT:
APPROVED:	DATE:	MATERIAL:	SCALE: NONE / PAGE 1 OF 1

REV

UNITS IN[MM]