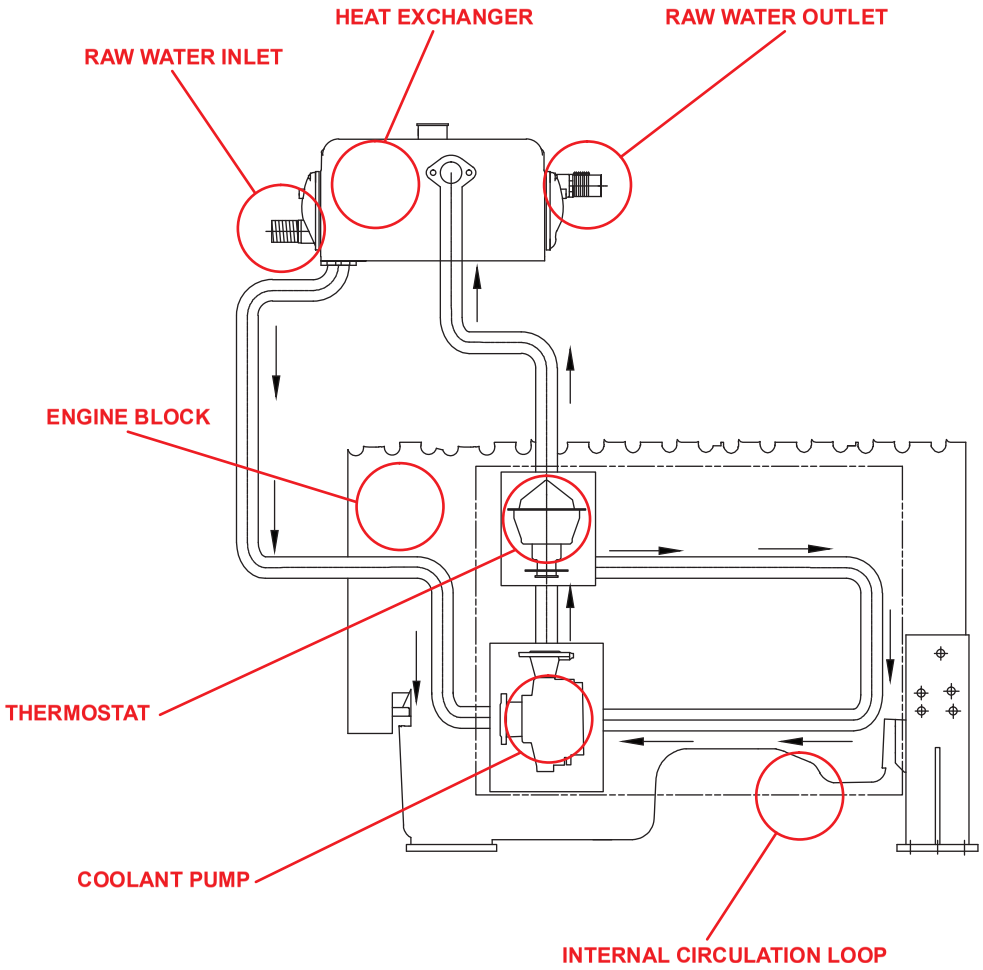

NOTES:

1. THE THERMOSTAT WILL OPEN WHEN THE COOLANT TEMPERATURE IS HIGHER THAN THE SET POINT. COOLANT WILL MOVE THROUGH THE HEAT EXCHANGER AND THEN RETURN TO THE ENGINE.
2. THE THERMOSTAT WILL CLOSE WHEN THE COOLANT TEMPERATURE IS LOWER THAN THE SET POINT. COOLANT WILL CONTINUE TO CIRCULATE INSIDE OF THE ENGINE.

REV	DESCRIPTION	DWN	APVD	DATE
A	CREATION	MJF		09/01/2020

AMERIFLO

REV	
UNITS	IN[MM]
DRW BY: MJF	DATE: 09/01/2020
CHK BY:	DATE:
APPROVED:	DATE:
NAME:	COOLING SYSTEM FLOW SCHEMATIC (INNER COOLANT)
PART NO.:	CSFSI-00
MATERIAL:	
PROJECTION:	
PROJECT:	
SCALE:	NONE
PAGE	1
OF	1